

What do I need for an operation? Which components need to be sterilized?



SonicWeld Rx® ultrasonic unit

- Power cord for corresponding country
- Handpiece incl. cable (sterilized)



- Sonotrode tips (sterilized)




- Wrench for sonotrodes (sterilized)



Resorbable implants from KLS Martin Group


- Sterile Resorb x/xG plates, meshes, membranes

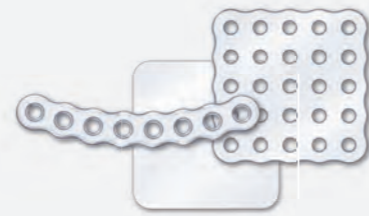

- Sterile SonicPins Rx®

Ø 1.6 mm

Ø 2.1 mm

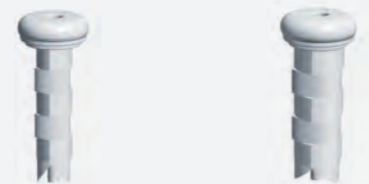

Xcelsior water bath*

- Power cord for corresponding country
- Cover hood (sterilized)



- Water container with frame (sterilized)



* Other thermo devices have not yet been tested for their suitability and may therefore not be used.



BOS Drill

- Handpiece (sterilized)
- Sterile single-use battery pack



- Twist Drills (sterilized)*

Ø 1.6 mm

Ø 2.1 mm



* Other drills have not yet been tested for their suitability and may therefore not be used.